



How to clean a NEFF oven with EasyClean and Pyrolitic features

Ingredients

Method

As any home cook knows, sometimes the best recipes can make the biggest mess. Even the best laid plans for cooking cleanliness can go awry with some overzealous bubbling or extra gooey cheese. If easy to clean features are high on your list when searching for a new oven, then you'll love NEFF's ultimate duo for perfect cleaning: EasyClean and Pyrolytic Self-Cleaning. Check your favourite NEFF oven's user guide or product specs to see if it has these helpful features:

How to use EasyClean

For a quick clean that is also easy on the environment, NEFF ovens' EasyClean function makes cleaning a breeze. This self-cleaning method is great for a lightly soiled oven, and uses a mixture of water and washing liquid to loosen the food residue.

Here's how to use your EasyClean function:

- Start with a room temperature oven. If you've just finished cooking, you'll need to wait for it to cool down sufficiently before beginning the cleaning process.
- Remove all the racks, rails and baking trays from within the oven.
- Mix a couple of drops of dishwashing liquid with 400mls water.
- Pour the water mixture into the bottom of your oven.
- Turn on your oven and press home, then flick through the settings until you get to EasyClean.
- Once it has finished its cleaning program, wipe the interior surfaces with a sponge and return all the accessories.

How to use the Pyrolytic Self-Cleaning function

To complete the duo for perfect cleaning, NEFF's Pyrolytic Self-Cleaning function means that you never have to worry about big spills getting baked in. The oven is heated to a high temperature which reduces all the leftover food and spills to ash. Once the oven has cooled down, this allows you to wipe away the rest and enjoy a sparkling clean oven with no chemical cleaners or scrubbing. This method of cleaning your oven is not intended for frequent cleans, but rather every 6 – 12 months depending on how dirty your oven gets.

Here's how to use your Pyrolytic Self-Cleaning function:

- Remove all accessories from your oven, including the wire racks and rails, the water tank if you have a steam oven and all your baking trays.
- Give the interior a quick wipe down to leave behind only the worst of the food residue.
- Turn on your oven and then flick through the options to find Pyrolytic Self-Cleaning cleaning. You can choose between three levels for your cleaning, depending on the amount of food residue present and how long it has been in there. Confirm your selection and press start.
- The oven door will be locked shut throughout the cleaning process until it has cooled sufficiently to be wiped down. You will see a lock symbol to indicate that it can't be opened.
- Wipe out any ash and return your racks and rails.

For minor spills, you can still clean your oven with gentle cleaning products after your oven has cooled following the cooking process. You can purchase NEFF approved oven cleaning products from your authorised dealer.

Want to find an oven with Easy Clean and Pyrolytic Self-Cleaning? Click [here](#) to see which ovens have these features.

Pyrolytic Self-Cleaning

NEFF makes oven cleaning easy with the Pyrolytic Self-Cleaning functionality, but this is only intended to be used every 6-12 months. Pyrolytic Self-Cleaning can be one of the most convenient ways to clean your oven. By heating your oven to a high temperature, this process turns all residue to ash for easy disposal. You only need to remove all attachments like racks and rails from inside the oven, choose which level of Pyrolytic Self-Cleaning you need based on residue, and close the door. Note that the door will lock during the cleaning process.

[Learn more about Pyrolytic Self-Cleaning oven and how they work?](#)

Easy Clean

Easy Clean is great for a lightly soiled oven. Start with a room temperature oven (let it cool if you've just used it), remove all racks and rails, mix a couple of drops of dishwashing liquid with 400mls of water, pour the mixture into the bottom of the oven, close the door, and turn onto Easy Clean. After it has run, wipe out the oven cavity.

Read a full run-down of Easy Clean and Pyrolytic Self-Cleaning [here](#) and watch videos on both.

And with the [NEFF Slide & Hide® oven range](#), cleaning like cooking becomes a lot easier with close access to the oven cavity for a deeper clean.

Notes
